



## Use and Care

### USE

- CORNINGWARE cookware is extremely versatile. It can be taken straight from the freezer to the oven, microwave, gas or electric stovetop and then to dishwasher or sink – no matter how hot or cold the dish is.
- CORNINGWARE cookware is easy to clean and does not stain or retain odours as will metal and plastic cookware.

#### • Stovetop use

~ CORNINGWARE cookware retains heat so well, you can use a lower heat setting than normal and save on energy. This also helps prevent sticking or burning of food.

For best results, prepare food which are stirred or have liquid as a cooking medium.

CORNINGWARE cookware can be used on gas, electric and ceramic stovetops.

#### • Oven and griller use

~ CORNINGWARE cookware is ideal for all oven types – conventional, convection and toaster ovens.

PYREX glass cover must not be placed under the grill or in a toaster oven.

#### • Microwave use

~ CORNINGWARE cookware is perfect for the microwave.

Use pot holders as dish may become hot during cooking.

#### • Refrigerator and freezer use

~ CORNINGWARE cookware can go from the refrigerator or freezer directly to the stovetop, oven or microwave.

### CARE

- Use only wooden, nylon or plastic utensils. Metal utensils can scratch or leave grey marks on the CORNINGWARE cookware surface.
- Use only plastic or nylon cleaning pads and non-abrasive cleansers such as CORNINGWARE Cleaner & Conditioner.
- To loosen cooked-on food, soak cookware in warm soapy water. Cool the PYREX cover before soaking.

### STORAGE

- Store dishes separately if space permits.
- Do not nest, as direct glass to glass contact can damage the cookware.
- Stack carefully by inverting the lids and stacking smaller pieces on top.
- If stacking is not possible due to limited space, nest the cookware by placing a cloth between each piece.

### SAFETY

All glass (e.g. PYREX) and glass-ceramic materials (e.g. CORNINGWARE) are breakable, so please take care in use.

- Do not use CORNINGWARE cookware for deep fat frying.

- Do not use for popping corn, caramelising sugar or making candy.
- Use pot holders when handling hot CORNINGWARE cookware in the microwave oven.
- Do not heat empty CORNINGWARE cookware in the microwave oven.
- DO NOT use or repair chipped, cracked, or broken CORNINGWARE or PYREX items.
- Place hot CORNINGWARE cookware on a placemat as retained heat could damage bench surfaces.
- Do not use the PYREX cover under a griller or in a toaster oven.
- Do not place a hot PYREX cover on a cold or wet surface, or handle with a wet cloth.



Rangetop



Microwave



Oven



Serving



Refrigerator/  
Freezer



Dishwasher